

SHARP[®]

DIGITAL FULL COLOUR MULTIFUNCTIONAL SYSTEM
Model: MX-6240N/MX-7040N

QUICK START GUIDE



BEFORE FIRST USE.....	2
INFORMATION ON DISPOSAL.....	3
OPERATION MANUALS AND HOW TO USE THEM	4
CAUTIONS.....	5
NAMES OF PARTS AND POWER INPUT.....	7
HOME SCREEN.....	8
PRINTER.....	9
COPY	10
FAX.....	12
SCAN	14
DOCUMENT FILING.....	16
COPY OUTPUT.....	18
MANUAL FINISHING.....	20
SPECIFICATIONS.....	22
SUPPLIES.....	28
OPTIONS	29
ADMINISTRATOR/OTHERS (NOISE EMISSION)	31

Keep this manual close at hand for reference whenever needed.

BEFORE FIRST USE

For the users of the fax function

Important safety instructions

- If any of your telephone equipment is not operating properly, you should immediately remove it from your telephone line, as it may cause harm to the telephone network.
- Never install telephone wiring during a lightning storm.
- Never install telephone sockets in wet locations unless the socket is specifically designed for wet locations.
- Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.
- Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- Do not use a telephone to report a gas leak in the vicinity of the leak.
- Do not install or use the machine near water, or when you are wet. Take care not to spill any liquids on the machine.
- Save these instructions.

Caution!

For complete electrical disconnection, pull out the main plug.

The socket-outlet shall be installed near the equipment and shall be easily accessible.

FAX interface cable and Line cable

These special accessories must be used with the device.

The Declaration of Conformity can be viewed at the following URL address. <http://www.sharp.de/doc/MX-FX11.pdf>

EMC (this machine and peripheral devices)

Warning:

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

This machine contains the software having modules developed by Independent JPEG Group.

This product includes Adobe® Flash® technology of Adobe Systems Incorporated.

Copyright© 1995-2007 Adobe Macromedia Software LLC. All rights reserved.

PostScript is a registered trademark of Adobe Systems Incorporated.

SOFTWARE LICENCE

The SOFTWARE LICENCE will appear when you install the software from the CD-ROM. By using all or any portion of the software on the CD-ROM or in the machine, you are agreeing to be bound by the terms of the SOFTWARE LICENCE.

- The explanations in this manual assume that you have a working knowledge of your Windows or Macintosh computer.
- For information on your operating system, please refer to your operating system manual or the online Help function.
- The explanations of screens and procedures in this manual are primarily for Windows Vista® in Windows® environments. The screens may vary depending on the version of the operating system.
- This manual contains references to the fax function. However, please note that the fax function is not available in some countries and regions.
- This manual contains explanations of the PC-Fax driver and PPD driver. However, please note that the PC-Fax driver and PPD driver are not available and do not appear on the software for installation in some countries and regions.
In this case, please install the English version if you want to use these drivers.
- Considerable care has been taken in preparing this manual. If you have any comments or concerns about the manual, please contact your dealer or nearest authorised service representative.
- This product has undergone strict quality control and inspection procedures. In the unlikely event that a defect or other problem is discovered, please contact your dealer or nearest authorised service representative.
- Aside from instances provided for by law, SHARP is not responsible for failures occurring during the use of the product or its options, or failures due to incorrect operation of the product and its options, or other failures, or for any damage that occurs due to use of the product.



Products that have earned the ENERGY STAR® are designed to protect the environment through superior energy efficiency.

The products that meet the ENERGY STAR® guidelines carry the logo shown above.

The products without the logo may not meet the ENERGY STAR® guidelines.

Warranty

While every effort has been made to make this document as accurate and helpful as possible, SHARP Corporation makes no warranty of any kind with regard to its content. All information included herein is subject to change without notice. SHARP is not responsible for any loss or damages, direct or indirect, arising from or related to the use of this operation manual.

© Copyright SHARP Corporation 2012. All rights reserved. Reproduction, adaptation or translation without prior written permission is prohibited, except as allowed under copyright laws.

MATERIAL SAFETY DATA SHEET

The MSDS (Material Safety Data Sheet) can be viewed at the following URL address:

<http://www.sharp-world.com/corporate/info/index.html>

INFORMATION ON DISPOSAL

■ Information on Disposal for Users (private households)

■ In the European Union

Attention: If you want to dispose of this equipment, please do not use the ordinary dust bin! Used electrical and electronic equipment must be treated separately and in accordance with legislation that requires proper treatment, recovery and recycling of used electrical and electronic equipment. Following the implementation by member states, private households within the EU states may return their used electrical and electronic equipment to designated collection facilities free of charge*. In some countries* your local retailer may also take back your old product free of charge if you purchase a similar new one.

*) Please contact your local authority for further details. If your used electrical or electronic equipment has batteries or accumulators, please dispose of these separately beforehand according to local requirements. By disposing of this product correctly you will help ensure that the waste undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health which could otherwise arise due to inappropriate waste handling.



Attention: Your product is marked with this symbol. It means that used electrical and electronic products should not be mixed with general household waste. There is a separate collection system for these products.

■ In other Countries outside the EU

If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal. For Switzerland: Used electrical or electronic equipment can be returned free of charge to the dealer, even if you don't purchase a new product. Further collection facilities are listed on the homepage of www.swico.ch or www.sens.ch.

■ Information on Disposal for Business Users

■ In the European Union

If the product is used for business purposes and you want to discard it: Please contact your SHARP dealer who will inform you about the take-back of the product. You might be charged for the costs arising from take-back and recycling. Small products (and small amounts) might be taken back by your local collection facilities. For Spain: Please contact the established collection system or your local authority for take-back of your used products.

■ In other Countries outside the EU

If you wish to discard of this product, please contact your local authorities and ask for the correct method of disposal.

SHARP ELECTRONICS (Europe) GmbH
Sonnenstraße 3, D-20097 Hamburg

OPERATION MANUALS AND HOW TO USE THEM

Quick Start Guide (this document)


Features important safety notes, names of parts and components, information about the power-on procedure, operation overviews, information for people who manage the machine, and information about other aspects of this machine.

Read this section before using the machine for the first time.




User's Manual (PC)

Can be downloaded from the machine to a computer and viewed. Refer to this document to learn more about printer mode and settings mode, and to learn about the details of each type of mode.

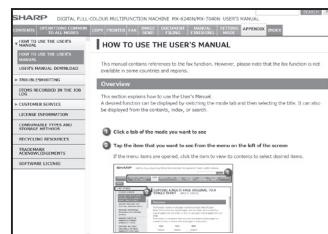

Software Setup Guide (CD-PDF)

Explains how to install the various drivers needed when using this machine as a printer, network scanner, or fax machine. Refer to this document when using this machine from a computer. The Software Setup Guide can be found on the "Software CD-ROM".

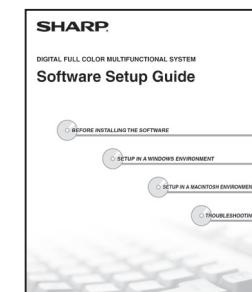

Operation Guide (Built-in)

Can be viewed by touching the operation guide icon on the machine's touch panel. When you are using this machine, use this document to see an overview of a particular mode or when you are having trouble operating the machine.



Downloading the User's Manual

You can download the [User's Manual] by following the procedures below while the machine is connected to the network.

1 Confirm the machine's IP address

First, tap the [Settings] key on the home screen, and then tap [System Settings] → [List Print (User)] in the left menu.


Next, tap the [Print] key in the [All Custom Setting List], and confirm the IP address in the printed list.

2 Insert the machine's IP address into the address bar of your web browser to access the machine.

<http://machine's IP address/>

User verification may be required depending on the machine's settings.

Please check with the machine's administrator to obtain the account information necessary for verification.

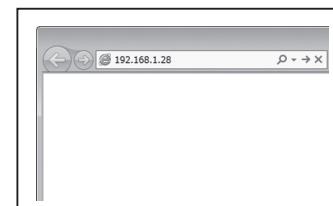

3 Download the [User's Manual]

Click [Operation Guide Download] on the displayed page. Next, select the desired language from the "Language to download" list, and then click the [Download] button.

4 Double-click on the downloaded file to display the User's Manual.

CAUTIONS

Symbols in this manual

To ensure safe use of the machine, this manual uses various safety symbols. The safety symbols are classified as explained below. Be sure you understand the meaning of the symbols when reading the manual.

Meaning of the symbols




CAUTION!
HOT



PINCH POINT
KEEP CLEAR



PROHIBITED
ACTIONS

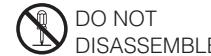

DO NOT
DISASSEMBLE



WARNING

Indicates a risk of death or serious injury.

Handling precautions



WARNING

If you notice smoke, a strange odor, or other abnormality, do not use the machine.

If used in this condition, fire or electrical shock may result.

Immediately switch off the main power and remove the power plug from the power outlet.

Contact your dealer or nearest authorised service representative.

Do not use a flammable spray to clean the machine.

If gas from the spray comes in contact with hot electrical components or the fusing unit inside the machine, fire or electrical shock may result.

Do not make any modifications to this machine.

Doing so may result in personal injury or damage to the machine.

Do not remove the machine casing.

High-voltage parts inside the machine may cause electrical shock.

Do not place a container of water or other liquid, or a metal object that might fall inside, on the machine.

If the liquid spills or the object falls into the machine, fire or electrical shock may result.

If a thunder storm begins, switch off the main power and remove the power plug from the outlet to prevent electrical shock and fire due to lightning.

The machine includes the document filing function, which stores document image data on the machine's hard drive. Stored documents can be called up and printed or transmitted as needed. If a hard drive failure occurs, it will no longer be possible to call up the stored document data. To prevent the loss of important documents in the unlikely event of a hard drive failure, keep the originals of important documents or store the original data elsewhere. With the exception of instances provided for by law, Sharp Corporation bears no responsibility for any damages or loss due to the loss of stored document data.

Laser information

Wave length	790 nm ± 10 nm
Pulse times	MX-6240N/MX-7040N Normal paper mode (P/S = 178 mm/s) = (3.49 µs ± 0.02 ns) / 7 mm MX-6240N/MX-7040N Normal paper mode (P/S = 225 mm/s) = (2.76 µs ± 0.02 ns) / 7 mm Heavy paper mode (P/S = 95 mm/s) = (3.27 µs ± 0.02 ns) / 7 mm
Output power	Max 0.672 mW (LD1 + LD2)

Caution

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

This Digital Equipment is CLASS 1 LASER PRODUCT (IEC 60825-1 Edition 2-2007)

"BATTERY DISPOSAL"



THIS PRODUCT CONTAINS A LITHIUM PRIMARY MEMORY BACK-UP BATTERY THAT MUST BE DISPOSED OF PROPERLY.

PLEASE CONTACT YOUR LOCAL SHARP DEALER OR AUTHORIZED SERVICE REPRESENTATIVE FOR ASSISTANCE IN DISPOSING OF THIS BATTERY.



CAUTION

Indicates a risk of human injury or property damage.

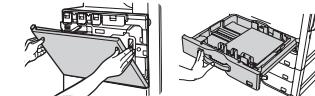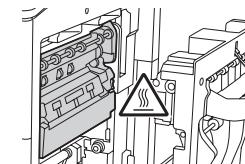


CAUTIONS

Power notes

WARNING

 Do not insert or remove the power plug with wet hands.

This may cause electrical shock.

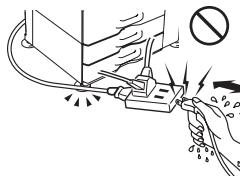

 When removing the power plug from the outlet, do not pull on the cord.

Pulling on the cord may cause damage such as wire exposure and breakage, and may result in fire or electrical shock.

 If you will not use the machine for a long time, be sure to remove the power plug from the outlet for safety.

 Be sure to connect the power cord only to a power outlet that meets the specified voltage and current requirements.

Also make certain the outlet is properly grounded. Do not use an extension cord or adapter to connect other devices to the power outlet used by the machine. Using an improper power supply may cause fire or electrical shock.

* For the power supply requirements, see the name plate in the lower left corner of the left side of the machine.

Installation notes

WARNING

 Do not install the machine on an unstable or slanted surface. Install the machine on a surface that can withstand the weight of the machine.

Risk of injury due to the machine falling or toppling.


 Be sure to connect the power cord only to a power outlet that meets the specified voltage and current requirements. Also make certain the outlet is properly grounded. Do not use an extension cord or adapter to connect other devices to the power outlet used by the machine. Using an improper power supply may cause fire or electrical shock.

* For the power supply requirements, see the name plate in the lower left corner of the left side of the machine.

 Near a wall

Be sure to leave the clearances shown right between the unit and the nearest wall or other surface.

For easy maintenance, you should also leave the clearances shown right around the unit.

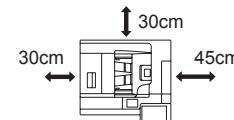

 Locations that are excessively hot, cold, humid, or dry (near heaters, humidifiers, air conditioners, etc.)

The paper will become damp and condensation may form inside the machine, causing misfeeds and dirty output.

 Do not install the machine in a location with poor air circulation.

A small amount of ozone is created inside the machine during printing. The amount of ozone created is not sufficient to be harmful; however, an unpleasant odor may be noticed during large copy runs, and thus the machine should be installed in a room with a ventilation fan or windows that provide sufficient air circulation. (The odor may occasionally cause headaches.)

 Locations exposed to direct sunlight

Plastic parts may become deformed and dirty output may result.

 Locations with ammonia gas

Installing the machine next to a diazo copy machine may cause dirty output.

 Locations subject to vibration.

Vibration may cause failure.

CAUTION

The machine includes a built-in hard drive. Do not subject the machine to shock or vibration. In particular, never move the machine while the power is on.

- The machine should be installed near an accessible power outlet for easy connection.
- Connect the machine to a power outlet which is not used for other electric appliances. If a lighting fixture is connected to the same outlet, the light may flicker.

About consumables

WARNING

 Do not throw a toner cartridge into a fire.

Toner may fly and cause burns.

 Store a toner cartridge out of the reach of children.

NAMES OF PARTS AND POWER INPUT

The machine has two power switches: The main power switch inside the front cover located in the lower left corner, and the [POWER] button (①) on the operation panel.

Turning on the power

- Turn the main power switch to the "I" position. The main power indicator blinks in green. The [POWER] button (①) does not function while the main power indicator blinks in green.
- After the main power indicator lights up green, press the [POWER] button (①).

Turning off the power

Turn off the power by pressing the [POWER] button (①), then turn the main power switch to the "O" position.


Restarting the machine

In order for some settings to take effect, the machine must be restarted. Follow the message displayed on the touch panel to restart the system (turn off the power by pressing the [POWER] button (①) and then press it again to turn the power back on).



Caution:

- When turning off the main power switch, make sure that all indicators other than the main power are turned off.
- In the case of a sudden main power outage, turn the power for the machine back on and then turn it off in the correct order. If you turn off the main power switch or unplug the power cord while the indicator is lit up or blinking, the hard disk drive may be damaged or data may be lost.
- Turn off both the [POWER] button (①) and the main power switch and unplug the power cord if you suspect a machine failure, if there is a bad thunderstorm nearby, or when you are moving the machine.

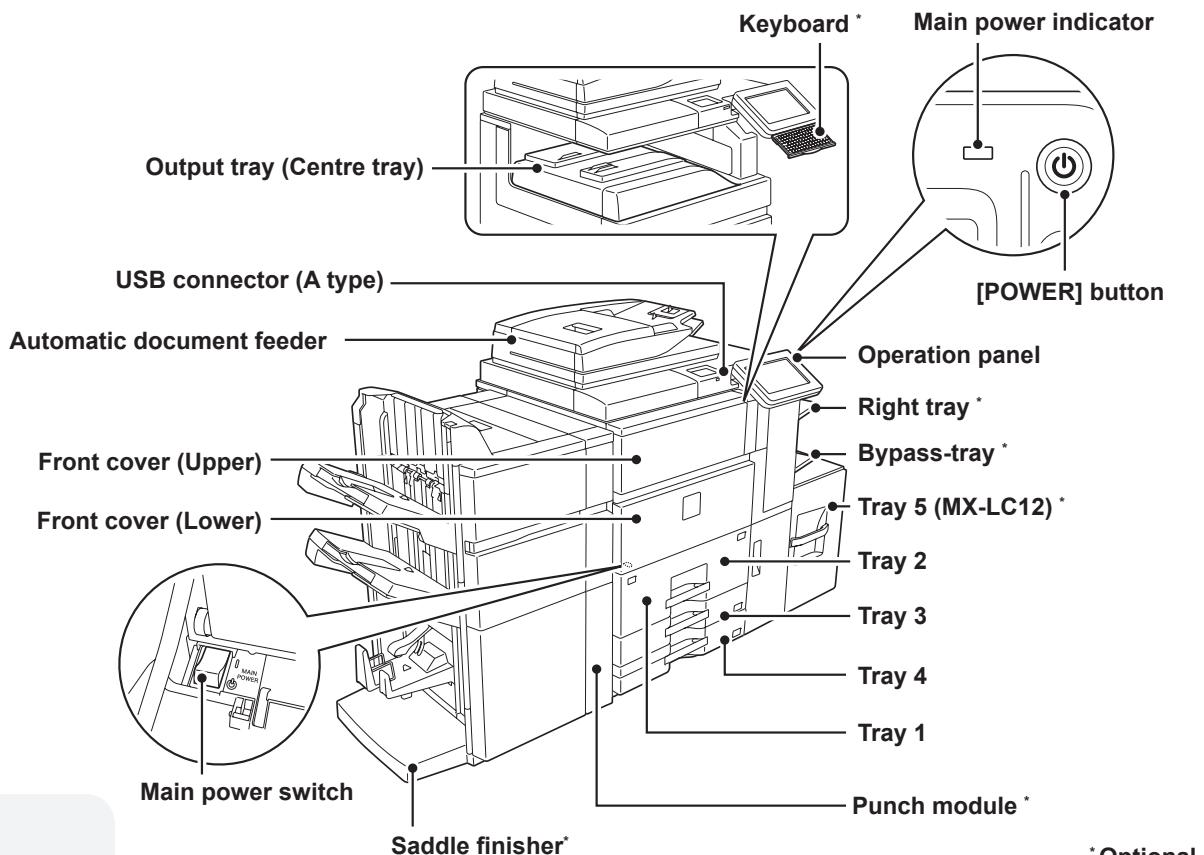

* Optional

- Please note that the Bypass-tray is standard feature in some countries and regions.
- When using the fax or Internet fax function, always keep the main power switch in the "On" position.
- In some machine operating states, restarting using the [POWER] button (①) may not make the settings take effect. In this case, turn off the main power switch and then turn it on again.

HOME SCREEN

This screen appears first. When you touch an icon, the corresponding screen appears.

Pressing the [Home Screen] button () on the operation panel also displays this screen.

* The screen may differ from the actual one depending on the model or customization.

Copy

The scanned original is printed.

HDD File retrieve

The scanned original is saved on the hard disk drive of the machine or an external memory device.

This icon can also be tapped to edit or operate the stored data.

Scrolling area

Up to 12 icons are displayed.


You can view hidden icons by scrolling the screen horizontally.

Fixed area

Up to 10 icons are always displayed.

Operation Guide

See this document if you are experiencing problems while operating the machine.

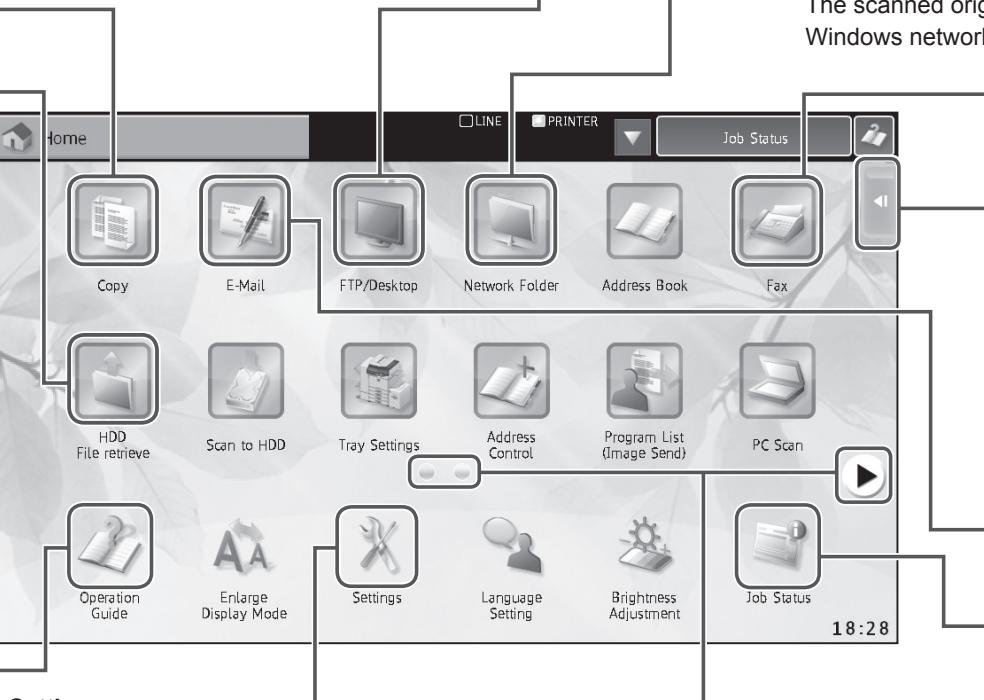

FTP/Desktop

The scanned document is sent to the specified FTP server directory or the specified folder in a computer connected to the network.

Network Folder

The scanned original is sent to the computer network folder specified in the Windows network.

Fax

The scanned original is sent via the telephone line.

Action panel

Tap an item to edit Home Screen or other operation.

E-mail

Job Status

A scanned original is attached to an e-mail and sent.

Page switch keys

Use these keys to view a hidden page in the scrolling area.

Operating the touch panel

In addition to the conventional method of single tapping, the touch panel of the machine can be operated by long touching, flicking and sliding.



Tapping
Touch and then quickly release the finger. Use this method to select a key, tab or checkbox.



Long touching
Touch the key with your finger and hold it for a while.



Double tapping
Lightly tap the touch panel twice. Use this method to switch preview modes or enlarge a preview image.



Flicking
Flick the panel to scroll a preview image.



Dragging
Drag (slide your finger touching the panel in a random direction) to replace or delete pages in the original displayed on the preview screen.



Sliding
Slide the scroll bar (with your finger touching the panel) to scroll up and down a list containing a large number of items.


PRINTER

Basic printing


In a Windows environment

This section explains how to print a document from "WordPad", which is a standard accessory application in Windows.


1 Select [Print] from the [File] menu

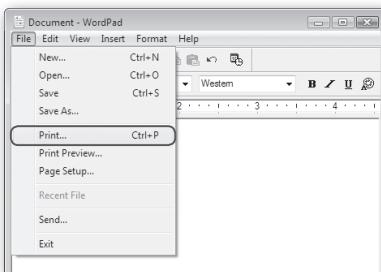


2 Select the printer driver for the machine and click the [Preferences] button

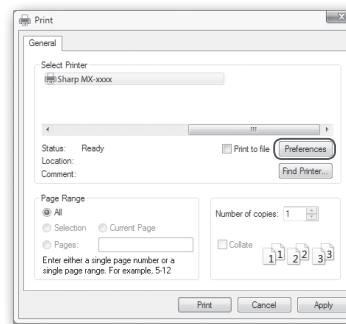

3 Click the [Paper] tab and select the paper size

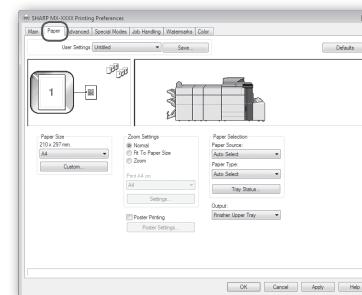

4 Click the [OK] button to start printing

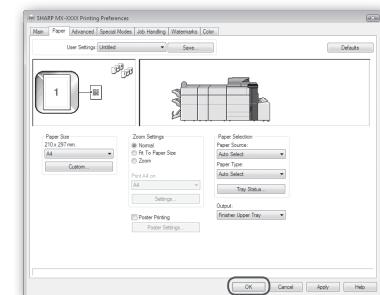


* Make sure the paper size is the same as the paper size set in the application.


For Mac OS X environments

The following example explains how to print a document from the standard accessory application "TextEdit" in Mac OS X.


1 Select [Page Setup] from the [File] menu and select the printer

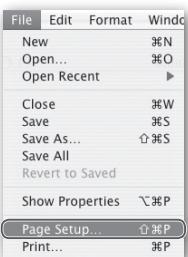


2 Configure paper and click the [OK] button

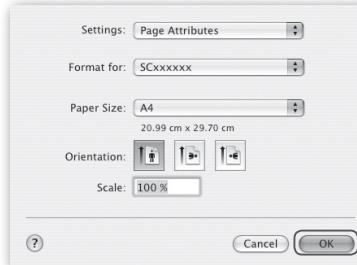

3 Select [Print] from the [File] menu. Make sure that the correct printer is selected.

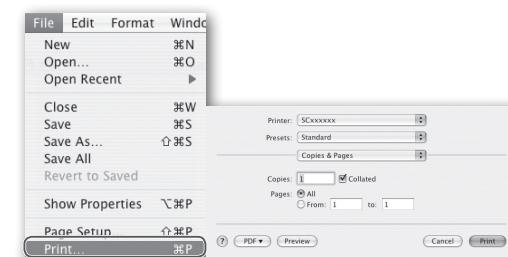

4 Print settings

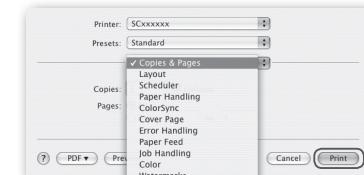


5 Click the [Print] button to start printing

- Different types of paper sheets can be inserted for covers, etc.
- For Windows environments, different paper can be inserted into the specified page, or the paper can be inserted as inserts.



Basic operations

1 Place the original

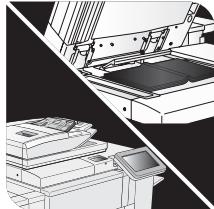

2 Copy settings



1 Copy settings

2 Displays the [Function Review] dialog

3 Scans the original and displays it in the preview area (if preview is required)

4 Cancels all settings

3 Preview



4 Specify the number of copies



Corrects the number of copies

5 Start (Black & white, or colour)



Copy settings

Colour mode

Colour Mode	Full Colour
Auto	Automatically identifies colour or black & white to copy
Full Colour	Copies in full colour
B/W	Copies in black & white
2 Colour	Copies in 2 colours
Single Colour	Copies in a single colour

2-sided copy

2-Sided Copy	1-Sided >1-Sided
	1-sided copy
	Outputs two 1-Side original sheets to one 2-Side sheet
	2-Sided >2-Sided
	Outputs one 2-Side original sheet to one 2-Side sheet
	2-Sided >1-Sided
	Outputs one 2-Side original sheet to two 1-Side sheets

Output

Output	Middle tray	Outputs to the middle tray of the machine
	Offset Tray	Outputs to the offset tray of the finisher
	Sort	Outputs by sorting on a set basis
	Group	Outputs by sorting on a page basis
	Right Tray	Outputs to the output tray on the right of the machine

Copy Ratio

Copy Ratio	100	(25 ~ 200) %
Zoom	Displays the basic ratio menu.	
XY Zoom	Displays the XY Zoom ratio menu.	
Auto Image	Automatically sets the ratio based on the original settings and paper settings.	
B4->B5 A3->A4	70%	115% B5->A4 B4->A3
B5->A5 B4->A4	81%	122% A5->B5 A4->B4
A4->B5 A3->A4	86%	141% B5->B4 A4->A3

100	(25 ~ 200) %	Enlarges or reduces the image in increments of 1%
Other Ratio	Transits to the "Other Ratio" screen	
by Paper	Transits to the "by Paper" screen	
by Size	Transits to the "by Size" screen	










Paper Select

Paper Select	Auto
Paper Tray	1 A4 Plain, 2 A4 Plain, 3 A4 Plain, 4 A4 Plain
	Tray 1/Tray 2/Tray 3/Tray 4
Bypass Tray	A4 Plain
	Type and Size
Large Capacity Tray	5 A4 Plain
	Large Capacity Tray (Optional)

* Please note that the Bypass-tray is standard feature in some countries and regions.


Exposure	
Auto	Selects automatically
 Map	Best for maps containing fine text
 Text	Best for text originals
 Text/Printed Photo	Prioritizes the quality of text and printed photo images
 Text/Photo	Best for text originals to which photos are pasted
 Printed Photo	Prioritizes the quality of photo images
 Photo	Best for photo originals

Original					
Auto	Selects automatically				
Inch	Displays inch size list				
AB	Displays AB size list				
Direct Entry	Displays the direct entry screen				
Custom Size	Displays the custom size list				
AB					
A5	A5R	B5	B5R	5½ x 8½	5½ x 8½R
A4	A4R	B4	A3	8½ x 11	8½ x 11R
216 x 340	216 x 343	8½ x 13	8½ x 14	11 x 17	8½ x 13½/5

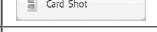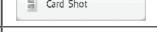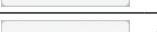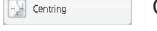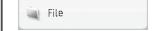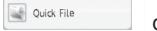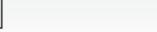  Others	
 Multi Shot	Copying a multi-page original to a single sheet
 Margin Shift	Adds margins
 Erase	Specify the edge erase (centre erase) and erase width of the original for copies
 Pamphlet Copy	Arranges a pamphlet format
 Covers/Inserts	Inserts cover or insertion sheets
 Transparency Inserts	Outputs transparency films in a way that they do not stick together
 Blank Page Skip	Skipping blank pages in an original
 Card Shot	Copies both sides of a card as a single page
 Position Image	Specify the image print position
 Tab Copy	Copies captions onto tab paper
 Dual Page Copy	Copies each facing page
 Book Copy	Copies a pamphlet
 Book Divide	Splits a pamphlet original by page in a copy
 Custom Image	Adds a registered image to an original
 Hidden Pattern Print	Padding unauthorised copy deterrent data
 Repeat Layout	Repeats the same image on one sheet in a copy
 Multi-Page Enlargement	Making a poster-sized copy
 Mirror Image	Inverts the original into a mirror image
 Full Bleed Copy	Copies originals with no edge cut-off
 Centring	Copying in the centre of the paper
 B/W Reverse	Reverses white and black
 Tandem Copy	Using two machines to copy in parallel
 Original Count	Check the number of scanned original sheets
 Slow Scan Mode	This mode switches document feeder controls for originals with thin paper thickness
 Sharpness	Adjust the sharpness of an image
 RGB Adjust	Adjusting red/green/blue in copies
 Suppress Background	Suppresses light background area in copies
 Brightness	Adjust the brightness of a colour copy image
 Intensity	Adjust the intensity (saturation) of a colour copy image
 Quick File	Temporarily saves the scanned data on the hard disk drive of the machine
 Preview Edit	Displays a preview image after selection

Basic operations

1 Place the original

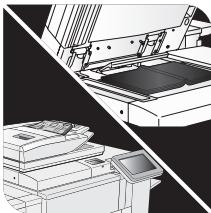

2 Fax scanning and send settings




1 Fax scanning and send settings

2 Displays the [Function Review] dialog

3 Scans the original and displays it in the preview area (if preview is required)

4 Cancels all settings

3 Preview

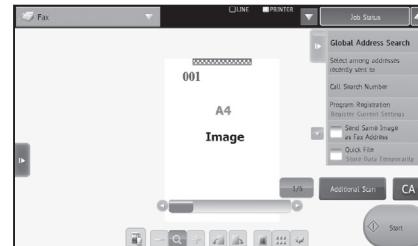

4 Specify the destination



Correction

5 Start



Fax scanning and send settings

Exposure

Exposure Selects automatically

Touch a darker or lighter area to adjust shading

Original

Original Specify the original size to be scanned
Scan Size A4

Displays the ratio of scan size and send size

Send Size A4

Scans a 2-Sided original (Tablet)

Scans a 2-Sided original (Book)

Specify the original orientation

Resolution

Resolution Best for normal size text originals


Best for text originals

Best for originals containing illustrations

Expresses fine text or the delicate thickness of photo originals

Address book


Tap this to display the address book screen to select a destination.

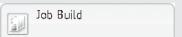

Job Build

Tap this to switch the job build mode on or off.

Setting it to On scans a large number of originals in segments.

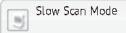

Slow Scan Mode

Tap this to switch the slow scan mode on or off.


Setting it to On prevents slips or other thin paper sheets from getting jammed when they are scanned.



Mixed Size Orig.

Use this to switch the mixed size original mode on or off.

Setting it to On scans originals of different sizes together using the automatic document feeder.

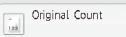

Original Count

Tap this to switch the original count setting on or off.

Setting it to On sends fax after checking the scanned number of original sheets.



Viewing original settings

Displays the original settings on the lower centre of the panel.

Select among addresses recently sent to

Select among addresses recently sent to

Select a destination from the transmission log screen.

Call Search Number

Call Search Number

Select a destination from the search number.

Send Directly

Send Directly


Sends the scanned original without saving it to the memory.

Others

Others



Specify the edge erase (centre erase) and erase width of the original to be sent

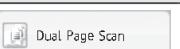


Scans each facing page of a bound document



Sends a pamphlet original by splitting it by page




Sends both sides of a card as a single page

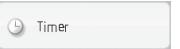


Automatically performs transmission or polling reception at the specified time



Stamps scanned originals (optional)

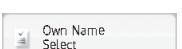


Select sender information for fax transmission

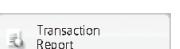

Prints the transaction report




Use this to register and manage the data to be sent when receiving data from the other machine by polling, as well as manage the data received by confidential reception.

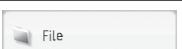


Saves the send data on the hard disk drive of the machine.



Temporarily saves the send data on the hard disk drive of the machine

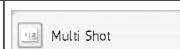

Sends two pages as a single page

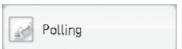


The original data placed in the other machine is retrieved by operating your machine

SCAN

Basic Operations (Scan to E-mail)

1 Place the original

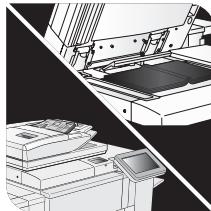


2 Scan settings



- 1 Scan settings
- 2 Displays the [Function Review] dialog
- 3 Scans the original and displays it in the preview area (if preview is required)
- 4 Cancels all settings

3 Preview

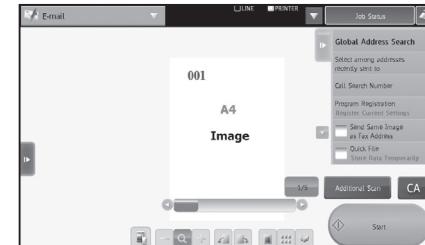

4 Specify the destination



5 Start



Scan settings

Address Book

Tap this to display the address book screen to select a destination.

To Tap this to switch between To and Cc.

Searches a destination

File Name

Select a file name or enter it directly.

Subject

Select a subject or enter it directly.

Touch to input Address

Enter an address directory.

Resolution

Resolution	200x200dpi
100x100dpi	300x300dpi
150x150dpi	400x400dpi
200x200dpi	600x600dpi

Send Same Image as Fax Address

Tap this to switch "Send Same Image as Fax Address" on or off.

Setting this to On sends the same image as the fax address.

Exposure

Auto Selects automatically

Touch a darker or lighter area to adjust shading

Text	Best for text originals
Text/Printed Photo	Prioritizes the quality of text and printed photo images
Text/Photo	Best for text originals to which photos are pasted
Printed Photo	Prioritizes the quality of photo images
Photo	Best for photo originals
Map	Best for maps containing fine text




File Format

This function sets the file format and compression mode (ratio) of send data.

File format			Compression mode			Number of pages setting	
TIFF	Colour/Greyscale	B/W	Low	Colour/Greyscale	B/W	Colour/Greyscale/Black & white	
XPS	Transmittable formats: TIFF, XPS, JPEG, PDF, PDF/A	Transmittable formats: TIFF, XPS, PDF, PDF/A	Middle	Compressible modes: Low, Medium, High, Bk Letter Emphasis	Compressible modes: None, MH (G3), MMR (G4)	<input type="checkbox"/> Specified Pages per File	Specify the number of pages per file
JPEG	<input type="checkbox"/> Encry. Creates an encrypted PDF file	<input type="checkbox"/> Encry. Creates an encrypted PDF file	High	<input type="checkbox"/> Compact Sends data by reducing its size	<input type="checkbox"/> U-Fine Sends data by reducing its size but without reducing the image quality	1 <input type="text" value="1~99"/> Page	Displays the number of pages per file
PDF			Bk Letter Emphasis				<input type="button"/> Increases or decreases the number of pages per file
PDF/A			None				
			MH (G3)				
			MMR (G4)				

Others

Others

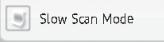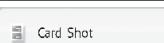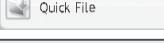
 Job Build	Tap this to switch the job build mode on or off. Setting it to On scans a large number of originals in segments.		Scans a thin original		Scans originals of different sizes together
 Original Count	Tap this to switch the original count setting on or off. Setting it to On checks the scanned number of original sheets.		Specify the edge erase (centre erase) and erase width of the original to be sent		Scans an original as two separate pages
 Book Divide	Sends a pamphlet original by splitting it by page		Sends both sides of a card as a single page		Automatically performs transmission at the specified time
 Verif. Stamp	Stamps scanned originals		Scans originals by suppressing light background area		Erases blank pages mixed in an original after scanning
 Drop Out colour	Removes chromatic colours from the scanned original before transmission		Adjust the sharpness of an image to produce a sharper or softer image.		Adding contrast to the scanned original before transmission.
 File	Saves the send data on the hard disk drive of the machine.		Temporarily saves the send data on the hard disk drive of the machine		

DOCUMENT FILING


This function saves the original scanned on the machine, received fax data, or print data from a PC on the hard disk drive of the machine or on an external memory device. The saved data can be printed or sent. Editing of the stored files, for example combining, is also possible.

Basic operations


1 HOME SCREEN

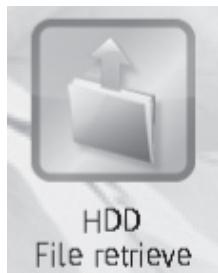

2 Select the folder

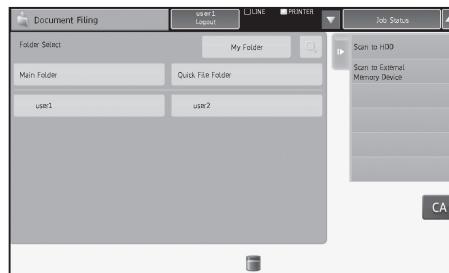

3 Place the original

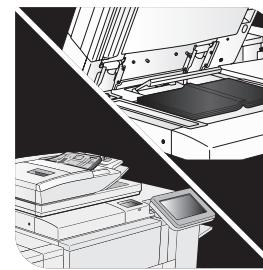

4 Start



Folder select screen

Main Folder


Use this to save the original you wish to share among users.

Custom Folder

The folder for the registered user.

HDD Status

The usage of the machine's hard disk drive is displayed in graphical format, separately for Main Folder, Custom Folder, and Quick File Folder.

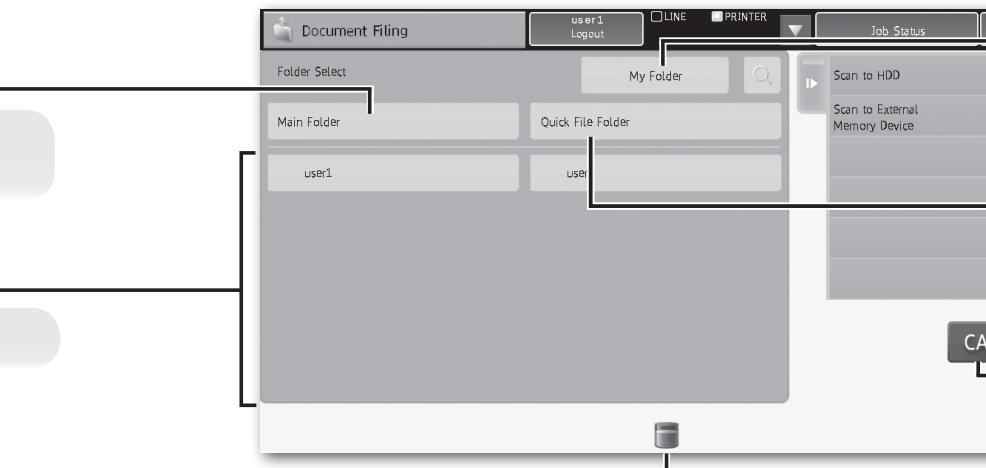

My Folder


Displays the private screen for the login user.

Quick File Folder

Saves files temporarily.

Reset button

Use this button to reset all settings.

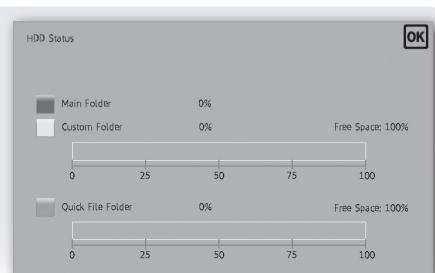


- Files stored using [Quick File] are provided with the "Sharing" property that can be accessed by any person for output and sending. Therefore, do not store sensitive documents or documents that you do not want to be used by others using the [Quick File] function.




File list view

You can select the method to display files. List view or thumbnails view can be selected.


Viewing by folder

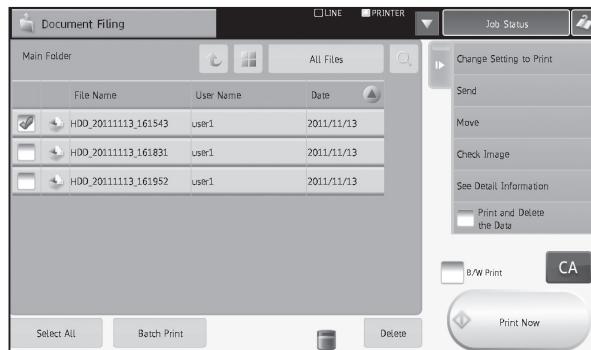

Viewing by job

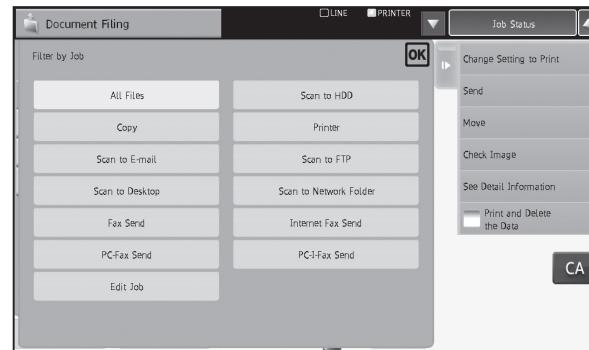

File thumbnails view

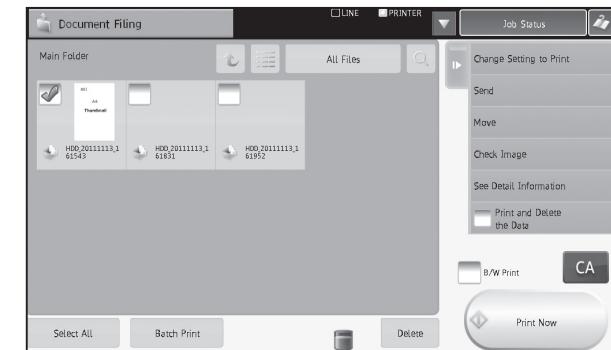

Job settings menu

Select a file you wish to retrieve, then select a desired operation. The following operations are displayed on the action panel.

The [Print Now] operation is not displayed on the action panel but displayed as a button in the trigger area.


Change Setting to Print	Prints a file from the reprint screen This item changes to [Print] when multiple files are selected.	See Detail Information	Views property change and file detail information This item is not displayed when multiple files are selected.
Send	Sends a file from the resend screen This item is not displayed when multiple files are selected.	<input type="checkbox"/> Print and Delete the Data	Select this item if you wish to delete data after printing.
Move	Moves a file You can also edit the file name using this option.	<input type="checkbox"/> B/W Print	Select this item if you wish to print all in black & white This item is not displayed when multiple files are selected.
Combine File	Merges the selected two files into a single file This item is not displayed when only one file or three or more files are selected.		Prints the selected file immediately
Check Image	Check the content of the original file by image This item is not displayed when multiple files are selected.	Delete	Deletes data

COPY OUTPUT


Configure the output settings for copies using Sort, Group, Offset, Staple, Punch, or Fold.

Basic operations

1 Select [Output]

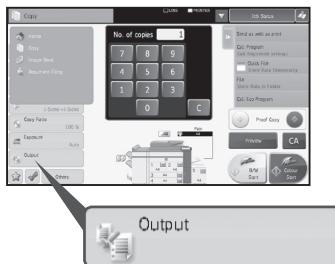

2 Copy output settings

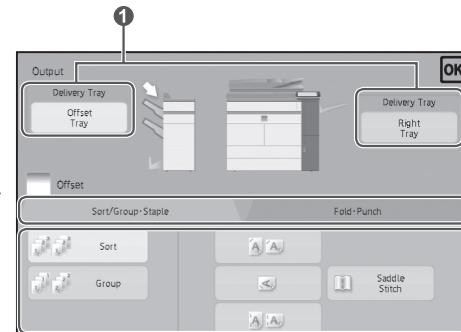

3 Check the preview image



4 Start

(Black & white, or colour)



Output tray settings

Output tray settings

Specify the destination to output copies.
The output tray currently selected is indicated by an arrow.

(When a finisher (100-sheet stapling) or saddle finisher (100-sheet stapling) is installed)
The [Middle Tray] key can be selected.

Offset Tray	Outputs to the offset tray
Right Tray	Outputs to the right tray If the offset, staple sort, saddle stitch, fold, or punch function is specified, the right tray is not available.

Sort/Group function

This function sets the sorting method when copying a scanned original.



Sorts the scanned original on a set basis, and outputs them



Groups the scanned original on a page basis, and outputs them.

Offset function

(When a finisher or saddle finisher is installed)
Select this function when you wish to output copies while shifting them set by set.
Selecting the staple function clears the Offset checkmark automatically.

Sort staple


(When a finisher or saddle finisher is installed)
This function staples the output copies and deliver them to the tray.



1 staple in back



1 staple in front

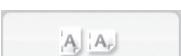

2 Staples



Saddle Stitch
Copies can be folded at the centre, stapled, and output.
This function is only available when a saddle finisher is installed.




Saddle Stitch

(When a saddle finisher is installed)


Copies can be folded at the centre, stapled, and output.

(When a trimming module is installed on the saddle finisher)

For saddle folding, it trims a side drop, offering a good-looking output image.

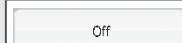

Releases saddle stitch

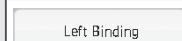

This selects left binding



This selects right binding



Scanning 2-Sided originals



Tap this to switch the cover setting Off or On, or to configure the paper tray settings.




Scans 1-Sided originals




Trimmer Setting

(When a trimming module is installed on the saddle finisher)

Enabling "Saddle Stitch" allows you to configure the trimmer settings.

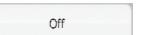

Turns off the trimmer setting

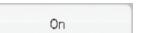

Turns on the trimmer setting

2 . 0 (2.0~20.0) mm

Specify the trimming width within the range of 2.0 to 20.0 mm


Folding function

(When a saddle finisher or folding unit is installed)

Copies can be folded and output.




Selects saddle fold

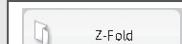

Selects Z-fold



Selects C-fold

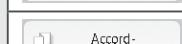

Selects accordion fold



Selects double fold



Selects half fold

Detail setting screen for each folding type




Folds paper so that the print side faces downward during output



Folds paper so that the print side faces upward during output



Select this option to fold multiple sheets together

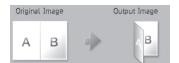

Displays a folding image



11.7" x 17"

Select the size of paper to be folded with Z-fold

(One of either A3, B4, A4R, 11" x 17", 8-1/2" x 14" and 8-1/2" x 11"R can be selected)



8.3" x 14"



8.3" x 11"



Folds paper for left binding during output



Folds paper for right binding during output

Punch function

(When a punch module is installed)

This function punches copies and outputs them. It is available for paper sizes B5R to A3.



2 Hole
Punch



3 Hole
Punch



4 Hole
Punch



4 Hole
Punch

Punches holes during output

MANUAL FINISHING


This function allows you to set for finish on copied or printed pages.

You can select the manual finishing mode if the inserter is installed.

When the finisher (100-sheet stapling), saddle finisher (100-sheet stapling), punch module, or folding unit is installed, finishing operations, such as stapling, punching or folding, can be performed.

Basic operations


1 Place the original

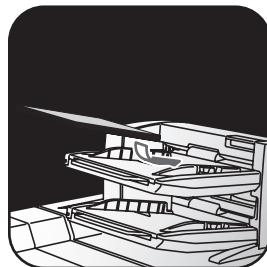


Adjust the inserter tray guide to the paper size, and load paper.
(Special media such as transparency film and tab paper cannot be used.)

2 Switch to the manual finishing mode


■ Changing modes from the Home Screen

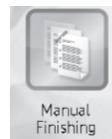

■ Changing modes from the screen for each mode

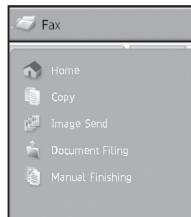

3 Finishing method settings

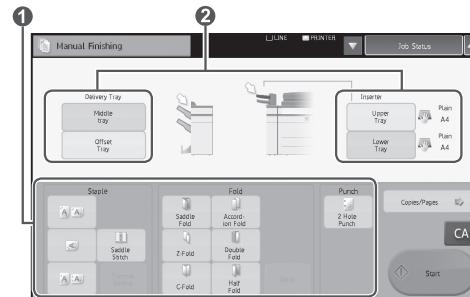

- 1 Select the appropriate finishing method
- 2 Change the paper tray or output tray as required

4 Start



Paper Loading and Output Settings

Checking and changing the output tray

You can check the type and size of paper loaded.
As needed, the paper type and size can be specified for each of the upper and lower trays.
If you wish to change the paper sizes or types, select [System Settings] > [Paper Tray Settings] > [Inserter].

Plain A4	Check the paper type and size
Upper Tray	Selects the upper tray as paper tray
Lower Tray	Selects the lower tray as paper tray

Checking and changing the output tray

The output tray is automatically selected based on the output function you set. If Z-Fold, Half Fold, or Punch is selected, however, you can select the middle or offset tray for the output tray.
If you have changed the output tray, the output function may be deselected depending on the original output settings.

Middle tray	Selects the middle tray as the output tray
Offset Tray	Selects the offset tray as the output tray



Orientation of placed original

For stapling or punching on the desired position, place the paper as shown in the following:

- For staple function, place the paper face up and align text with the direction of the touch panel display. (For the saddle stitch function, place the paper so that middle surface faces up.)
- When using punch or folding function, place the paper face up, and align text horizontally and upward with the scan (right) direction.

Staple

(When a finisher installed)

This function staples the loaded paper sheets into a sheaf.



1 staple in back



1 staple in front



2 Staples


Saddle Stitch

(When a saddle finisher (100-sheet stapling) is installed)


This function staples each set of copies at two positions in the centre of paper, folds them in half, and outputs them.

(When a trimming module is installed on the saddle finisher)

For saddle stitch, it trims a side drop, offering a good-looking output image.

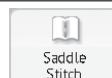

Staples each set of copies at two positions in the centre of paper, and folds them in half during output

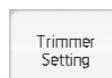

Trims a side drop for saddle folding during output
Specify the trimming width within the range of 2.0 to 20.0 mm

Folding function


(When a folding unit is installed)

This function folds paper in Z-fold, C-fold, or other types of shapes.

(When a saddle finisher (100-sheet stapling) is installed)

Paper can be folded in a saddle fold.


- The paper sizes that can be selected vary depending on the type of paper fold.
- Special media such as transparency film and tab paper cannot be used.

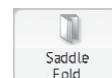

Allowable paper sizes:

A3W, A3, B4, A4R, SRA3 12" x 18", 11" x 17", 8-1/2" x 14", 8-1/2" x 11"R, 8K

The fold settings can be configured in [Detail].

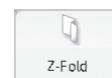

Allowable paper sizes:

A3, B4, A4R, 11" x 17", 8-1/2" x 14", 8-1/2" x 11"R
This can be used with staple or punch function only when the A3, B4 or 11" x 17" paper is used.



Allowable paper sizes:

A4R, 8-1/2" x 11"R




Allowable paper sizes:

A4R, 8-1/2" x 11"R



Allowable paper sizes:

A4R, 8-1/2" x 11"R

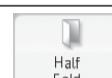

Allowable paper sizes:

A4R, 8-1/2" x 11"R

Setting the number of copies (number of pages)

Copies/Pages



This function loads previously sorted sheets and outputs multiple sets at once.

Number of copies setting



Enter the number of output copies
(from 1 to 999)

Number of pages setting



All Pages

Select this to set all pages as one set
* If this setting is enabled, set the [Number of Copies] to "1".



Manual

Select this to specify the number of page for each set



Enter a numeric value when [Manual] is selected.
(from 1 to 200 pages)

Checking and changing the output tray

The output tray is automatically selected based on the output function you set. If Z-Fold, Half Fold, or Punch is selected, however, you can select the middle or offset tray for the output tray.

If you have changed the output tray, the output function may be deselected depending on the original output settings.



Selects the middle tray as the output tray



Selects the offset tray as the output tray

Punch function

(When a punch module is installed)

This function punches holes in paper. It is available for paper sizes B5R to A3.

You cannot use A3W (12" x 18") size paper, and special media such as transparency film and tab papers.



Punches holes during output

If the paper size used is A3, B4 or 11" x 17", this function can be used with saddle stitch or folding function for Z-fold.

SPECIFICATIONS

Basic Specifications / Copier specifications

Name	MX-6240N/MX-7040N
Type	Console
Colour	Full colour
Copier system	Laser electrostatic copier
Scanning resolution	Scan (B/W): 600 × 600 dpi, 600 × 400 dpi Scan (full colour): 600 × 600 dpi Print: 600 × 600 dpi, equivalent to 9,600 dpi × 600 dpi
Gradation	Scan: equivalent to 256 levels / Print: equivalent to 256 levels
Original paper sizes	Max. A3 (11" × 17") for sheets and bound documents
A3 wide (12" × 18") to A5R, 5-1/2" × 8-1/2"R, Transparency film, Heavy paper, Envelopes	
Tray 1: A4, B5, 8-1/2" × 11"	
Tray 2: A4, 8-1/2" × 11"	
Tray 3: A3 wide (12" × 18"), A3, B4, A4, A4R, B5, B5R, 11" × 17", 8-1/2" × 14", 8-1/2" × 13-1/2", 8-1/2" × 13-2/5", 8-1/2" × 13", 8-1/2" × 11", 8-1/2" × 11"R, 7-1/4" × 10-1/2"R	
Tray 4: A3 wide (12" × 18"), A3, B4, A4, A4R, B5, B5R, A5R, 11" × 17", 8-1/2" × 14", 8-1/2" × 13-1/2", 8-1/2" × 13-2/5", 8-1/2" × 13", 8-1/2" × 11", 8-1/2" × 11"R, 7-1/4" × 10-1/2"R, 5-1/2" × 8-1/2"R	
Copy sizes	Multi-bypass tray: A3 wide (12" × 18") to A5R, 5-1/2" × 8-1/2"R, SRA3, Transparency film, Heavy paper, Envelopes Lost margin (leading edge): 4 mm (11/64") ± 1 mm (± 3/64") Lost margin (trailing edge): 2 mm (6/64") - 5 mm (- 13/64") Leading edge / trailing edge: total 8 mm (21/64") or less Near edge / far edge: total 4 mm (11/64") ± 2 mm (± 6/64") or less
Warm-up time	55 seconds or less ● This may vary depending on the ambient conditions.
MX-6240N MX-7040N	
First-copy time	Full colour: 5.6 seconds 5.1 seconds B/W: 4.0 seconds 3.7 seconds ● This may vary depending on the state of the machine.
A4, B5, 8-1/2" × 11": A4R, B5R, A5R, 8-1/2" × 11"R, 7-1/4" × 10-1/2"R, 5-1/2" × 8-1/2"R: B4, 8-1/2" × 14": A3, 11" × 17":	
MX-6240N MX-7040N	
62 copies/min. 70 copies/min. 43 copies/min. 46 copies/min. 36 copies/min. 40 copies/min. 32 copies/min. 35 copies/min.	
* Continuous speed for same original source. Output may be temporarily interrupted to stabilize image quality.	

Copy ratios	Same size: 1:1 ± 0.8 % Enlarge: 115 %, 122 %, 141 %, 200 %, 400 % Reduce: 25 %, 50 %, 70 %, 81 %, 86 % Zoom range: 25 to 400 % (25 - 200 % using DSPF) in 1 % increments, total 376 increments. Can calculate zoom rate when mm is specified.
Useable paper	Tray 1: 60 to 105 g/m ² (16 lbs. to 28 lbs.) Tray 2: 60 to 105 g/m ² (16 lbs. to 28 lbs.) Tray 3: 60 to 220 g/m ² (16 lbs. to 60 lbs.) Tray 4: 60 to 220 g/m ² (16 lbs. to 60 lbs.) Multi-bypass tray: 55 to 300 g/m ² Index (16 lbs. to 170 lbs.)
Paper feed / capacity	1,200 plus 800 plus 500 plus 500 sheets in 4 trays plus 100-sheet multi-bypass tray ● Using 80 g/m ² (21 lbs.) weight paper
Max. paper feed / max. capacity	1,200 plus 800 plus 500 plus 500 sheets in 4 trays plus 500-sheet multi-bypass tray plus 5,000 sheets in large capacity trays ● Using 80 g/m ² (21 lbs.) weight paper
Continuous copy	Max. 9,999 copies
Memory	Standard: 5 GB HDD: 1 TB SD card: 4GB ● 1 GB = One billion bytes when referring to hard drive capacity. Actual format capacity is less.
Ambient environment	Operating environment 10 °C (54 °F) to 35 °C (91 °F) (20 % to 85 % RH) (Humidity is 60% or below while the temperature is 35°C (91°F), and the temperature is 30°C (86°F) or below while the humidity is more than 85%.) 590 - 1,013 hPa Standard environment 20 °C (68 °F) to 25 °C (77 °F) (65 ± 5 % RH)
Required power supply	AC 220-240V/8A, 50/60Hz (2 × 220-240V power supplies) Power consumption Max. 3.84 kW (including options such as the desk)
Dimensions	845 mm (W) × 844 mm (D) × 1,222 mm (H) (33-15/64" (W) × 33-15/64" (D) × 48-7/64" (H))
Weight	Approx. 222 kg (489 lbs.)
Overall dimensions	With multi-bypass tray extended 1,242 mm (W) × 844 mm (D) (48-29/32" (W) × 33-15/64" (D)) With right side exit tray extended 1,261 mm (W) × 844 mm (D) (49-21/32" (W) × 33-15/64" (D))

Automatic document feeder (Standard equipment)

Name	Duplex Single Pass Feeder (DSPF)	
Document feeder types	Duplex Single Pass Feeder (DSPF)	
Original paper sizes	A3 (11" x 17") to A5 (5-1/2" x 8-1/2")	
Original paper types	Paper weight	Thin paper 35 g/m ² (9 lbs.) to 49 g/m ² (13 lbs.) Plain paper 50 g/m ² (13 lbs.) to 128 g/m ² (34 lbs.)
Two-sided		50 g/m ² (13 lbs.) to 128 g/m ² (34 lbs.)

Paper storage capacity	150 sheets (21 lbs. (80 g/m ²)) (or maximum stack height of 49/64" (19.5 mm))
Scan speed (copy)	B/W: 75 one-sided sheets/minute (A4 (8-1/2" x 11") horizontal) (600 x 400 dpi) Colour: 51 one-sided sheets/minute (A4 (8-1/2" x 11") horizontal) (600 x 600 dpi)

Large Capacity Trays

MX-LC13

Name	Large Capacity Trays	
Paper sizes	A3W (12" x 18") to B5R (8-1/2" x 11"), SRA3	
Useable paper	55 to 300 g/m ² Index (16 lbs. to 170 lbs.)	
Paper capacity	5,000 sheets (2,500 x 2)	
Required power supply	AC 230V, 10A	
Dimensions	895 mm (W) x 763 mm (D) x 986 mm (H) (35-1/4" (W) x 30-1/32" (D) x 38-13/16" (H))	
Weight	Approx. 131 kg (288 lbs.)	

MX-MF11

Name	Multi Bypass Tray	
Paper sizes	A3W (12" x 18") to B5R (8-1/2" x 11"), SRA3	
Useable paper	55 to 220 g/m ² Cover (16 lbs. to 80 lbs.)	
Paper capacity	500 sheets	
Required power supply	Supplied from large capacity trays	
Dimensions	When output paper tray is stored 705 mm (W) x 556 mm (D) x 170 mm (H) (27-3/4" (W) x 21-7/8" (D) x 6-11/16" (H)) When output paper tray is extended 880 mm (W) x 556 mm (D) x 170 mm (H) (34-21/32" (W) x 21-7/8" (D) x 6-11/16" (H))	
Weight	Approx. 18 kg (39 lbs.)	

Large Capacity Tray

MX-LC12

Name	Large Capacity Tray	
Paper sizes	A4, B5, 8-1/2" x 11"	
Useable paper	60 to 220 g/m ² Cover (16 lbs. to 80 lbs.)	
Paper capacity	3,500 sheets	
Dimensions	376 mm (W) x 575 mm (D) x 523 mm (H) (14-51/64" (W) x 22-41/64" (D) x 20-19/32" (H))	
Weight	Approx. 28.5 kg (63 lbs.)	

MX-LCX3 N

Name	Large Capacity Tray	
Paper sizes	A3W (12" x 18") to B5 (8-1/2" x 11")	
Useable paper	60 to 220 g/m ² Cover (16 lbs. to 80 lbs.)	
Paper capacity	3,500 sheets	
Dimensions	690 mm (W) x 578 mm (D) x 522 mm (H) (27-11/64" (W) x 22-49/64" (D) x 20-19/32" (H))	
Weight	Approx. 50 kg (110 lbs.)	

SPECIFICATIONS

Finisher

MX-FN19

Name	Finisher (50-sheet stapling)	
Paper sizes	Depends on feeder specifications	
Useable paper	55 to 300 g/m ² Index (16 lbs. to 170 lbs.)	
No. of trays	2	
Tray capacity (21 lbs. (80 g/m ²))	Upper tray	Non-stapled A3W (12" x 18") / A3 (11" x 17") / B4 (8-1/2" x 14"), SRA3: 650 sheets A4 (8-1/2" x 11") / A4R (8-1/2" x 11"R) / B5 / B5R (7-1/4" x 10-1/2"R) / A5R (5-1/2" x 8-1/2"R): 1,550 sheets
	Staple function	A3 (11" x 17") / B4 (8-1/2" x 14"): 50 units or 650 sheets A4 (8-1/2" x 11") / A4R (8-1/2" x 11"R) / B5: 100 units or 1,550 sheets
	Lower tray	Non-stapled A3W (12" x 18") / A3 (11" x 17") / B4 (8-1/2" x 14"), SRA3: 650 sheets A4 (8-1/2" x 11") / A4R (8-1/2" x 11"R) / B5 / B5R (7-1/4" x 10-1/2"R) / A5R (5-1/2" x 8-1/2"R): 1,700 sheets A4/B5/8-1/2" x 11" Non offset: 2,450 sheets
	Staple function	A3 (11" x 17") / B4 (8-1/2" x 14"): 50 units or 650 sheets A4 (8-1/2" x 11") / A4R (8-1/2" x 11"R) / B5: 100 units or 1,700 sheets
	<ul style="list-style-type: none"> Offset output is not available for A3W (12" x 18") / B5R (7-1/4" x 10-1/2"R) / A5R (5-1/2" x 8-1/2"R). 	
Max. no. of stapled sheets (90 g/m ² (24 lbs.))	Max. no. of 50 sheets (A4 (8-1/2" x 11"), B5) Max. no. of 30 sheets (A3 (11" x 17"), B4 (8-1/2" x 14"), A4R (8-1/2" x 11"R))	
Staple position	1 bottom, 1 top, 2 middle	
Required power supply	Supplied from the machine	
Dimensions	When output paper tray is stored 530 mm (W) x 662 mm (D) x 1100 mm (H) (20-7/8" (W) x 26-3/64" (D) x 43-19/64" (H)) When output paper tray is extended 660 mm (W) x 662 mm (D) x 1100 mm (H) (26" (W) x 26-1/8" (D) x 43-19/64" (H))	
Weight	Approx. 42 kg (92.6 lbs.)	

MX-FN21

Name	Finisher (100-sheet stapling)	
Paper sizes	Depends on feeder specifications	
Useable paper	55 to 300 g/m ² Index (16 lbs. to 170 lbs.)	
No. of trays	3	
Tray capacity (80 g/m ² (21 lbs.))	Upper tray	Non-stapled A3W (12" x 18") / A3 (11" x 17") / B4 (8-1/2" x 14"), SRA3: 750 sheets A4 (8-1/2" x 11") / A4R (8-1/2" x 11"R) / B5 / B5R (7-1/4" x 10-1/2"R) / 5-1/2" x 8-1/2"R (A5R): 1,500 sheets
	Staple function	A3 (11" x 17") / B4 (8-1/2" x 14"): 50 units or 750 sheets A4 (8-1/2" x 11") / A4R (8-1/2" x 11"R) / B5: 100 units or 1,500 sheets
	Centre tray	Non-stapled A3W (12" x 18") / A3 (11" x 17") / B4 (8-1/2" x 14"), SRA3: 125 sheets A4 (8-1/2" x 11") / A4R (8-1/2" x 11"R) / B5 / B5R (7-1/4" x 10-1/2"R) / A5R (5-1/2" x 8-1/2"R): 250 sheets
	Lower tray	Non-stapled A3W (12" x 18") / A3 (11" x 17") / B4 (8-1/2" x 14"), SRA3: 750 sheets A4 (8-1/2" x 11") / A4R (8-1/2" x 11"R) / B5 / B5R (7-1/4" x 10-1/2"R) / A5R (5-1/2" x 8-1/2"R): 1,500 sheets A4/B5/8-1/2" x 11" Non offset: 2,500 sheets
	Staple function	A3 (11" x 17") / B4 (8-1/2" x 14"): 50 units or 750 sheets A4 (8-1/2" x 11") / A4R (8-1/2" x 11"R) / B5: 100 units or 1,500 sheets
	<ul style="list-style-type: none"> Offset output is not available for A3W (12" x 18") / B5R (7-1/4" x 10-1/2"R) / A5R (5-1/2" x 8-1/2"R). 	
Max. no. of stapled sheets (90 g/m ² (24 lbs.))	Max. no. of 100 sheets (A4 (8-1/2" x 11"), B5) Max. no. of 50 sheets (A3 (11" x 17"), B4 (8-1/2" x 14"), A4R (8-1/2" x 11"R))	
Staple position	1 bottom, 1 top, 2 middle	
Required power supply	AC 230V, 10A	
Dimensions	When output paper tray is stored 654 mm (W) x 765 mm (D) x 1040 mm (H) (25-3/4" (W) x 30-1/8" (D) x 40-15/16" (H)) When output paper tray is extended 782 mm (W) x 765 mm (D) x 1040 mm (H) (30-51/64" (W) x 30-1/8" (D) x 40-15/16" (H))	
Weight	Approx. 61 kg (134.5 lbs.)	

Saddle stitch finisher

MX-FN20

Name	Saddle Stitch Finisher (50-sheet stapling)	
Paper sizes	Depends on feeder specifications	
Useable paper	55 to 300 g/m ² Index (16 lbs. to 170 lbs.)	
No. of trays	3	
Upper tray	Non-stapled	A3W (12" x 18") / A3 (11" x 17") / B4 (8-1/2" x 14"), SRA3: 650 sheets A4 (8-1/2" x 11") / A4R (8-1/2" x 11"R) / B5 / B5R (7-1/4" x 10-1/2"R) / A5R (5-1/2" x 8-1/2"R): 1,550 sheets
	Staple function	A3 (11" x 17") / B4 (8-1/2" x 14"): 50 units or 650 sheets A4 (8-1/2" x 11") / A4R (8-1/2" x 11"R) / B5: 100 units or 1,550 sheets
Lower tray	Non-sort	A3W (12" x 18") / A3 (11" x 17") / B4 (8-1/2" x 14"), SRA3: 650 sheets A4R (8-1/2" x 11"R) / B5R (7-1/4" x 10-1/2"R) / A5R (5-1/2" x 8-1/2"R): 1,700 sheets A4/B5/8-1/2" x 11": 2,450 sheets
Tray capacity (80 g/m ² (21 lbs.))	Staple function	A3 (11" x 17") / B4 (8-1/2" x 14"): 50 units or 650 sheets A4 (8-1/2" x 11") / A4R (8-1/2" x 11"R) / B5: 100 units or 1,700 sheets
	Saddle stitch tray	10 units (11 to 15 sheets), 20 units (6 to 10 sheets), 25 units (1 to 5 sheets)
		• Offset output is not available for A3W (12" x 18") / B5R (7-1/4" x 10-1/2"R) / A5R (5-1/2" x 8-1/2"R).
Max. no. of stapled sheets (90 g/m ² (24 lbs.))	Max. no. of 50 sheets (A4 (8-1/2" x 11"), B5) Max. no. of 30 sheets (A3 (11" x 17"), B4 (8-1/2" x 14"), A4R (8-1/2" x 11"R))	
Staple position	1 bottom, 1 top, 2 middle	
Staple method (for saddle stitch)	Centred fold with stapling in 2 centre places	
Saddle stitch fold position	Centred fold	
Saddle usable sizes	A3 (11" x 17") / B4 (8-1/2" x 14") / A4R (8-1/2" x 11"R) / A3W (12" x 18")	
Saddle usable paper weight	60 g/m ² (16 lbs.) to 256 g/m ² (68 lbs.) Paper weighting 106 g/m ² (28 lbs.) to 256 g/m ² (68 lbs.). 256 g/m ² (68 lbs.) is only able to be used in cover mode and for single sheet fold.	
Max. no. of saddle-stitched sheets	Max. no. of 15 sheets (80 g/m ² (21 lbs.)); 14 sheets (80 g/m ² (21 lbs.)) + 1 sheet (256 g/m ² (68 lbs.)) Max. no. of 10 sheets (90 g/m ² (24 lbs.)); 9 sheets (90 g/m ² (24 lbs.)) + 1 sheet (256 g/m ² (68 lbs.))	
Required power supply	Supplied from the machine	
Dimensions	When output paper tray is stored 642 mm (W) x 662 mm (D) x 1100 mm (H) (25-9/32" (W) x 26-3/64" (D) x 43-19/64" (H)) When output paper tray is extended 772 mm (W) x 662 mm (D) x 1100 mm (H) (30-3/8" (W) x 26-1/8" (D) x 43-19/64" (H))	
Weight	Approx. 72 kg (158.7 lbs.)	

MX-FN22

Name	Saddle Stitch Finisher (100-sheet stapling)	
Paper sizes	Depends on feeder specifications	
Useable paper	55 to 300 g/m ² Index (16 lbs. to 170 lbs.)	
No. of trays	4	
Upper tray	Non-stapled	A3W (12" x 18") / A3 (11" x 17") / B4 (8-1/2" x 14"), SRA3: 750 sheets A4 (8-1/2" x 11") / A4R (8-1/2" x 11"R) / B5 / B5R (7-1/4" x 10-1/2"R) / A5R (5-1/2" x 8-1/2"R): 1,500 sheets
	Staple function	A3 (11" x 17") / B4 (8-1/2" x 14"): 50 units or 750 sheets A4 (8-1/2" x 11") / A4R (8-1/2" x 11"R) / B5: 100 units or 1,500 sheets
Centre tray	Non-stapled	A3W (12" x 18") / A3 (11" x 17") / B4 (8-1/2" x 14"), SRA3: 125 sheets A4 (8-1/2" x 11") / A4R (8-1/2" x 11"R) / B5 / B5R (7-1/4" x 10-1/2"R) / A5R (5-1/2" x 8-1/2"R): 250 sheets
Lower tray	Non-sort	A3W (12" x 18") / A3 (11" x 17") / B4 (8-1/2" x 14"), SRA3: 750 sheets A4R (8-1/2" x 11"R) / B5R (7-1/4" x 10-1/2"R) / A5R (5-1/2" x 8-1/2"R): 1,500 sheets A4/B5/8-1/2" x 11": 2,500 sheets
Tray capacity (80 g/m ² (21 lbs.))	Staple function	A3 (11" x 17") / B4 (8-1/2" x 14"): 50 units or 750 sheets A4 (8-1/2" x 11") / A4R (8-1/2" x 11"R) / B5: 100 units or 1,500 sheets
	Saddle stitch tray	60 to 105 g/m ² (16 lbs. to 28 lbs.): 5 sheets 60 to 81.4 g/m ² (16 lbs. to 21 lbs.): 5 units (16 to 20 sheets), 10 units (11 to 15 sheets), 15 units (1 to 5 sheets) 81.4 g/m ² over to 105 g/m ² (21 lbs. over to 28 lbs.): 15 units (6 to 10 sheets), 25 units (1 to 5 sheets)
	Staple function in cover mode	60 to 81.4 g/m ² (16 lbs. to 21 lbs.): 5 units (16 to 20 sheets), 10 units (11 to 15 sheets) 81.4 g/m ² over to 105 g/m ² (21 lbs. over to 28 lbs.): 10 units (1 to 10 sheets)
		• Offset output is not available for A3W (12" x 18") / B5R (7-1/4" x 10-1/2"R) / A5R (5-1/2" x 8-1/2"R).
Max. no. of stapled sheets (90 g/m ² (24 lbs.))	Max. no. of 100 sheets (A4 (8-1/2" x 11"), B5) Max. no. of 50 sheets (A3 (11" x 17"), B4 (8-1/2" x 14"), A4R (8-1/2" x 11"R))	
Staple position	1 bottom, 1 top, 2 middle	
Staple method (for saddle stitch)	Centred fold with stapling in 2 centre places	
Saddle stitch fold position	Centred fold	
Saddle usable sizes	A3 (11" x 17") / B4 (8-1/2" x 14") / A4R (8-1/2" x 11"R) / A3W (12" x 18")	
Saddle usable paper weight	60 g/m ² (16 lbs.) to 300 g/m ² Index (170 lbs.) Paper weighting 106 g/m ² (28 lbs.) to 300 g/m ² Index (170 lbs.) is only able to be used in cover mode and for single sheet fold.	
Max. no. of saddle-stitched sheets	Max. no. of 30 sheets (80 g/m ² (21 lbs.)); 29 sheets (80 g/m ² (21 lbs.)) + 1 sheet (256 g/m ² (68 lbs.)) Max. no. of 20 sheets (90 g/m ² (24 lbs.)); 19 sheets (90 g/m ² (24 lbs.)) + 1 sheet (256 g/m ² (68 lbs.))	
Required power supply	AC 230V, 10A	
Dimensions	When output paper tray is stored 767 mm (W) x 765 mm (D) x 1040 mm (H) (30-13/64" (W) x 30-1/8" (D) x 40-15/16" (H)) When output paper tray is extended 896 mm (W) x 765 mm (D) x 1040 mm (H) (35-9/32" (W) x 30-1/8" (D) x 40-15/16" (H))	
Weight	Approx. 108 kg (238.1 lbs.)	

SPECIFICATIONS

Punch module (MX-PN12A, MX-PN12B, MX-PN12C, MX-PN12D)

Name	Punch module	
	MX-PN12A, MX-PN12B, MX-PN12C, MX-PN12D	
Paper size for punch module	A3 (11" x 17") to B5R (7-1/4" x 10-1/2"R)	
	MX-PN12A: 2 holes	MX-PN12C: 4 holes
Holes	MX-PN12B: 3 holes	MX-PN12D: 4 holes (wide)

Required power supply	Supplied from finisher/saddle stitch finisher
Dimensions	102 mm (W) x 662 mm (D) x 914 mm (H) (4-1/64" (W) x 26-1/8" (D) x 36" (H))
Weight	Approx. 8 kg (17.6 lbs.)

Punch module (MX-PN13A, MX-PN13B, MX-PN13C, MX-PN13D)

Name	Punch module	
	MX-PN13A, MX-PN13B, MX-PN13C, MX-PN13D	
Paper size for punch module	A3 (11" x 17") to B5R (7-1/4" x 10-1/2"R)	
	MX-PN13A: 2 holes	MX-PN13C: 4 holes
Holes	MX-PN13B: 3 holes	MX-PN13D: 4 holes (wide)

Required power supply	Supplied from finisher/saddle stitch finisher
Dimensions	95 mm (W) x 715 mm (D) x 392 mm (H) (3-47/64" (W) x 28-5/32" (D) x 9-13/32" (H))
Weight	Approx. 3.7 kg (8.2 lbs.)

Fax Specifications

Name	Facsimile expansion kit (MX-FX11)	
Useable lines	General phone lines (PSTN), private branch exchange (PBX)	
Scanning line density	Normal characters:	8 dot/mm x 3.85 line/mm
	Small characters:	8 dot/mm x 7.7 line/mm
	Fine characters:	8 dot/mm x 15.4 line/mm
	High-definition:	16 dot/mm x 15.4 line/mm
Connection speed	Super G3: 33.6 kbps, G3: 14.4 kbps	
Coding method	MH, MR, MMR, JBIG	
Connection mode	Super G3 / G3	
Original paper sizes for transmission	A3 (11" x 17") to A5 (5-1/2" x 8-1/2") (Paper with a max. length of 1,000 mm* can be transmitted (one-sided and B/W only).)	
Registered paper size	A3 (11" x 17") to A5 (5-1/2" x 8-1/2")	

Transmission time	Approx. 2 seconds *1 (A4 (8-1/2" x 11") Sharp standard paper, normal characters, Super G3 (JBIG)) Approx. 6 seconds (G3 ECM)
Memory	1 GB
Notes	Touch dial memory Max. of 2,000 entries (Including group dialling for fax, scanner, and Internet fax) Entries per group Max. of 500 entries Mass transmissions Max. of 500 recipients

*1 Complies with the 33.6 kbps transmission method for Super G3 facsimiles standardized by the International Telecommunications Union (ITU-T). This is the speed for when sending an A4 (8-1/2" x 11") size piece of paper of around 700 characters at standard image quality (8 x 3.85 line/mm) in Hi-speed mode (33.6 kbps). This is the transmission speed for image information only and does not include time for transmission control. The actual time needed for a transmission depends on the content of the text, type of receiving fax machine, and telephone line conditions.

Network Printer Specifications

Type	Built-in type
Continuous print speed	Same as continuous copy speed
Resolution	Data processing: 600 x 600 dpi, 1,200 x 1,200 dpi Print: 600 x 600 dpi, equivalent to 9,600 dpi x 600 dpi, 1,200 x 1,200 dpi
Page description language	Standard: PCL6 emulation, Adobe® PostScript®3
Compatible protocols	TCP/IP, IPv4/IPv6, IPX/SPX, NetBIOS, IPP, EtherTalk
Compatible OS	Windows XP, Windows Server 2003, Windows Vista, Windows Server 2008, Windows 7, Windows Server 2008R2 * Macintosh (Mac OS x 10.4 ~ 10.4.11, 10.5 ~ 10.5.8, 10.6.5 ~ 10.6.8, 10.7 ~ 10.7.2)

Internal fonts (options)	80 fonts for PCL, 136 fonts for Adobe® PostScript®3
Memory	Machine system memory and hard disk
Interface	10BASE-T/100BASE-TX/1000BASE-T, USB 1.1, USB 2.0 (high speed mode)

*: There are cases when a connection cannot be established. Please contact your local dealer for more information.

Network Scanner Specifications

Type	Colour scanner
Scan resolution (main x vertical)	100 x 100 dpi, 150 x 150 dpi, 200 x 200 dpi, 300 x 300 dpi, 400 x 400 dpi, 600 x 600 dpi (push scan) 50 to 9,600 dpi *1 (pull scan)
Scan speed (8-1/2" x 11" (A4))	B/W: 75 sheets/minute (one-sided) Colour: 75 sheets/minute (one-sided) ● When in standard mode using Sharp standard paper (A4 (8-1/2" x 11") size with 6% coverage) and the auto colour detector is turned off. The speed varies depending on the data volume of the original.
Interface	10BASE-T/100BASE-TX/1000BASE-T, USB 2.0 (during USB memory scanning)
Compatible protocols	TCP/IP (IPv4)
Compatible OS *2	Pull scan (TWAIN) Windows XP, Windows Server 2003, Windows Vista, Windows Server 2008, Windows 7, Windows Server 2008R2 *2

Trimming Module

Name	Trimming module (MX-TM10)
Useable size for trimming module	A3W (12" x 18"), A3, B4, A4R, 11" x 17", 8-1/2" x 14", 8-1/2" x 13-1/2", 8-1/2" x 13-2/5", 8-1/2" x 13", 8-1/2" x 11"R, SRA3
Max. no. of sheets to be trimmed	2 to 20 sheets (60 g/m ² to 81.4 g/m ² (16 lbs. to 21 lbs.)) 2 to 10 sheets (81.4 g/m ² over to 105 g/m ² (21 lbs. over to 28 lbs.)) 2 to 3 sheets (105 g/m ² over to 209 g/m ² Index (28 lbs. over to 56 lbs.)) ● When plain paper trimmed. Including one front cover of 300 g/m ² Index (170 lbs.) or less.

Folding Unit

Name	Folding unit (MX-FD10)
Folding types	Z-Fold, C-Fold, Accordion Fold, Double Fold, Half Fold.
Useable size for folding unit	Z-Fold: A3, B4, A4R, 11" x 17", 8-1/2" x 14", 8-1/2" x 11"R C-Fold, Accordion Fold, Double Fold, Half Fold: A4R, 8-1/2" x 11"R
Useable paper	55 g/m ² to 105 g/m ² (16 lbs. to 28 lbs.)

Inserter

Name	Inserter (MX-CF11)
Useable size for inserter	A3W (12" x 18"), A3, B4, A4, A4R, B5, B5R, A5R, 11" x 17", 8-1/2" x 14", 8-1/2" x 13-1/2", 8-1/2" x 13-2/5", 8-1/2" x 13", 8-1/2" x 11", 8-1/2" x 11"R, 7-1/4" x 10-1/2"R, 5-1/2" x 8-1/2"R
Useable paper	60 g/m ² to 220 g/m ² Cover (16 lbs. to 80 lbs.)
No. of trays	2

Output format	(B/W) TIFF, PDF, PDF/A, encrypted PDF, XPS *3 Compression method: decompression, G3 (MH), G4 (MMR) (Grey scale/colour) TIFF, JPEG, PDF, PDF/A, encrypted PDF, high compression PDF, XPS *3 Compression method: JPEG (high, mid, and low compression, Emphasis black letter)
Driver	TWAIN compliant

*1: You must decrease the scan size when increasing the resolution.

*2: There are cases when a connection cannot be established. Please contact your local dealer for more information.

*3: XPS (XML Paper Specification)

Required power supply	Supplied from saddle stitch finisher
Dimensions	251 mm (W) x 625 mm (D) x 403 mm (H) (9-7/8" (W) x 24-15/32" (D) x 15-7/8" (H))
Weight	Approx. 32 kg (70.6 lbs.)

Tray capacity (80 g/m ² (21 lbs.))	C-Fold/Accordion Fold/Double Fold 60 mm (2-23/64") (Equivalent to 40 sheets. (Equivalent to 25 sheets for Double Fold)) ● Copies made in Z-Fold or Half Fold are output to the tray of the finisher (large stacker) or saddle stitch finisher (large stacker).
Required power supply	AC 100-240V
Dimensions	336 mm (W) x 770 mm (D) x 1050 mm (H) (13-15/32" (W) x 30-5/16" (D) x 41-11/32" (H))
Weight	Approx. 66 kg (145.5 lbs.)

Tray capacity (80 g/m ² (21 lbs.))	Upper tray: 200 sheets Lower tray: 200 sheets
Required power supply	Supplied from the machine
Dimensions	540 mm (W) x 760 mm (D) x 1276 mm (H) (21-1/4" (W) x 29-7/8" (D) x 50-1/4" (H))
Weight	Approx. 45 kg (99.2 lbs.)

SUPPLIES

Standard supplies for this product that can be replaced by the user include paper, toner cartridges, and staple cartridges for the finisher.

Be sure to use only SHARP-specified products for the toner cartridges, finisher staple cartridge, and transparency film.

SHARP



GENUINE SUPPLIES

For best copying results, be sure to use only Sharp Genuine Supplies which are designed, engineered, and tested to maximize the life and performance of Sharp products. Look for the Genuine Supplies label on the toner package.

■ Storage of supplies

■ Proper storage

1. Store the supplies in a location that is:
 - clean and dry,
 - at a stable temperature,
 - not exposed to direct sunlight.
2. Store paper in the wrapper and lying flat.
3. Paper stored in packages standing up or out of the wrapper may curl or become damp, resulting in paper misfeeds.

■ Storing toner cartridges

Store a new toner cartridge box horizontally with the top side up. Do not store a toner cartridge standing on end. If stored standing on end, the toner may not distribute well even after shaking the cartridge vigorously, and will remain inside the cartridge without flowing out.

■ Staple cartridge

The finisher and saddle finisher require the following staple cartridge:

MX-SCX1 (for finisher and saddle stitch finisher)

Approx. 5000 per cartridge × 3 cartridges

AR-SC3 (for saddle stitch of saddle stitch finisher and saddle stitch finisher (large stacker))

Approx. 2000 per cartridge × 3 cartridges

AR-SC2 (for finisher (large stacker))

Approx. 5000 per cartridge × 3 cartridges

■ Supply of spare parts and consumables

The supply of spare parts for repair of the machine is guaranteed for at least 7 years following the termination of production. Spare parts are those parts of the machine which may break down within the scope of the ordinary use of the product, whereas those parts which normally exceed the life of the product are not to be considered as spare parts. Consumables too, are available for 7 years following the termination of production.

OPTIONS

Optional Units

When optional units are installed, finishing operations such as stapling, punching or folding, can be performed.

With full installation options



- 1 Folding Unit
- 2 Finisher/Saddle Stitch Finisher
- 3 Inserter
- 4 Curl Correction Unit
- 5 This Unit
- 6 Multi Bypass Tray
- 7 Paper Pass Unit
- 8 Large Capacity Trays

Finisher/Saddle Stitch Finisher

Each set of copies can be stapled, or the sheets can be folded and stapled.



**Finisher
MX-FN19**

- 50 sheets



**Finisher
MX-FN21**

- 100 sheets



**Saddle Stitch Finisher
MX-FN20**

- 50 sheets
- 15 sheet (saddle stitch finisher)



**Saddle Stitch Finisher
MX-FN22**

- 100 sheets
- 25 sheets (saddle stitch finisher)
- For saddle folding, it trims a side drop, offering a good-looking output image (In use of trimming module).

Folding Unit

Each set of copies can be folded.



**Folding Unit
MX-FD10**

- Half Fold
- Z-Fold
- C-Fold
- Accordion Fold
- Double Fold

Punch Module

Punches copies and outputs them automatically to the tray.



Punch Module (3 holes) MX-PN12B

- For 50-sheet stapling finisher (MX-FN19) or saddle stitch finisher (MX-FN20)

Punch Module (3 holes) MX-PN13B

- For 100-sheet stapling finisher (MX-FN21) or saddle stitch finisher (MX-FN22)

Inserter

Inserts a sheet of paper into a specific page as an insertion sheet.



Inserter MX-CF11

- 200 sheets × 2

Curl Correction Unit

Perform the curl correction of the output.



Curl Correction Unit MX-RB15

Large Capacity Trays

You can drastically reduce the time to load the large number of paper.



Large Capacity Tray MX-LC12

- A4 size paper can be set.



Large Capacity Tray MX-LCX3 N

- A3 size paper can be set.



Large Capacity Trays MX-LC13

- 2 trays

ADMINISTRATOR/OTHERS (NOISE EMISSION)

Forwarding all sent or received data to the administrator (document administration function)

This function is used to forward all data sent and received by the machine to a specified destination (Scan to E-mail address, Scan to FTP destination, Scan to Network Folder destination, or Scan to Desktop destination). This function can be used by the administrator of the machine to archive all sent and received data. To configure the document administration settings, click [Application Settings] and then [Document Administration Function] in "Settings mode". (Administrator rights are required.)



- The forwarding data, exposure, and resolution settings of sent and received data remain in effect.
- When forwarding is enabled for data sent in fax mode:
 - The [Direct TX] key does not appear on the touch panel.
 - Quick online transmission and dialing using the speaker cannot be used.

Setting mode password

An administrator password is required to configure the machine settings using administrator rights. The settings can be configured from either the operation panel or by using a computer web browser. After setting up the machine, refer to "Settings mode" in the User's Manual to set a new password.



The same administrator password is used for the operation panel and the Web page. If the administrator changes a password on the operation panel, the password will be valid when logging in to the Web page.

Password for logging in from a computer

As factory default, "Administrator" is the only account allowed to log in from a Web browser. By setting user authentication, "System Administrator" will also be allowed to log in from the Web browser. You can also specify a device account as a login user.

Noise emission

Noise emission values

The following shows noise emission values as measured according to ISO7779.

Sound power level $L_{WA\Delta}$

	MX-6240N	MX-7040N
Operating	7.8 B	7.8 B
Standby	-	-

Sound pressure level $L_{pA\Delta}$

	MX-6240N	MX-7040N
Operating	59 dB	60 dB
Standby	-	-

- Operating: with options MX-RB12 and MX-FN19.
- Standby: "-" = less than background noise.

The factory default passwords for respective accounts are shown in the following.

Logging in as an "Administrator" or "System Administrator" allows you to manage all the settings available via Web browser.

	Account	Password
User	user	users
Administrator	admin	admin
System administrator	sysadmin	sysadmin



Do not forget the new administrator password.

MX-6240N/MX-7040N

QUICK START GUIDE

SHARP[®]

SHARP CORPORATION

PRINTED IN FRANCE
TINSE5039GHZZ

