

CONTENTS

I. Preface	1-1
II. About Print Server Card	2-1
Parameter Configuration	2-2
What We Support	2-5
Function	2-5
III. Installation in a Windows Environment	3-1
Print in Windows95/98/Me Using TCP/IP	3-3
Setup Network	3-3
Setup Print Server Card	3-4
Adding a LPR Port of SC-Print2000	3-6
Adding an IPP Port of SC-Print2000	3-8
Print in WindowsNT4.0 Using TCP/IP	3-10
Setup Network	3-10
Setup Print Server Card	3-12
Print Using LPR on WindowsNT4.0	3-14
Print in Windows2000/XP Using TCP/IP	3-15
Setup Network	3-15
Setup Print Server Card	3-16
Print Using Standard TCP/IP Port of Windows 2000/XP	3-18
Print from LPR in Windows2000/XP	3-22
Adding an IPP Port of Windows2000/XP	3-24
Print in Windows95/98/Me Using NetBEUI	3-26
Setup Network	3-26

Setup Print Server Card	3-27
Add Printer	3-28
Print in WindowsNT4.0 Using NetBEUI	3-29
Setup Network	3-29
Setup Print Server Card	3-30
Add Printer	3-31
Print in Windows2000 Using NetBEUI	3-32
Setup Network	3-32
Setup Print Server Card	3-33
Add Printer	3-34
 IV. Using in NetWare Environment	4-1
Print with NetWare	4-2
About Print Server Mode	4-2
About Remote Printer Mode	4-3
Print in NetWare5/4.x Environment	4-4
Set Up for NDS Environment	4-4
Set Up for Bindery Environment.....	4-16
Print Via File Server	4-22
Print in NetWare3.x Environment	4-23
Set Up File Server and Print Server Card	4-23
Print Via File Server	4-29

V. Using in Macintosh Environment	5-1
Print with Macintosh	5-2
Installing and loading PSC Setup Utility	5-2
Configuring General	5-6
Configuring AppleTalk	5-7
Set up Printer and Printing	5-8
Configure Other Protocols	5-10
Configuring TCP/IP	5-10
Configuring NetWare	5-11
Configuring NetBEUI	5-13
VI. Using in UNIX Environment	6-1
Configuring hosts File	6-2
Printing with LPD	6-3
Using in Solaris2.6 Environment	6-4
Using in Solaris 2.3x - 2.5x Environment	6-6
Using in HP-UX 9.x and 10.x Environment	6-8
Using in AIX 4.x.x Environment	6-10
Using in BSD UNIX Environment	6-12
Printing Using FTP	6-14
VII. Print Server Card User Software	7-1
Start Print Server Card User Software	7-2
Print Server Card Quick Setup	7-4
Print Server Card Standard Setup	7-5
Load NICManager	7-6
Configure IP Address Manually	7-10
Configure General	7-11
Configure TCP/IP	7-12
Configure NetWare	7-14
Configure AppleTalk	7-17

Configure NetBEUI	7-18
Confirm Setting	7-19
System Status Monitor	7-20
Manage NetWare Object	7-21
Set NICManager	7-23
Install SC-Print2000	7-25
Install SC-Print2000	7-25
Add SC-Print2000 LPR Port	7-26
Add SC-Print2000 IPP Port	7-27
Set Printer Driver	7-29
 VIII. Trouble Shooting.....	8-1
Trouble During installation	8-2
Trouble in Windows Environment (TCP/IP)	8-2
Trouble in Windows Environment (NetBEUI)	8-2
Trouble in NetWare Environment	8-3
Trouble in Macintosh Environment	8-4
 Appendix	1
Set IP Address Using DHCP/BOOTP/RARP/ARP	2
Setting IP Address Using DHCP (WindowsNT4.0)	2
Setting IP Address Using DHCP (Windows2000)	4
Setting IP Address Using BOOTP	6
Setting IP Address Using RARP	7
Setting IP Address Using ARP	8
About NetBEUI	10
About TELNET	12